


How to disable the buzzer and pop-out window on NVR


Generally speaking, in view of reminding the user of the alarm happens, our NVR system default enabled buzzer (the beeps) and pop-out window when alarm happens. But we can disable it if you don't need it.

1- Enter "Main Menu" > "Alarm" > "Motion" > "Select Camera" > "Trigger Actions"

Like pictures as below:

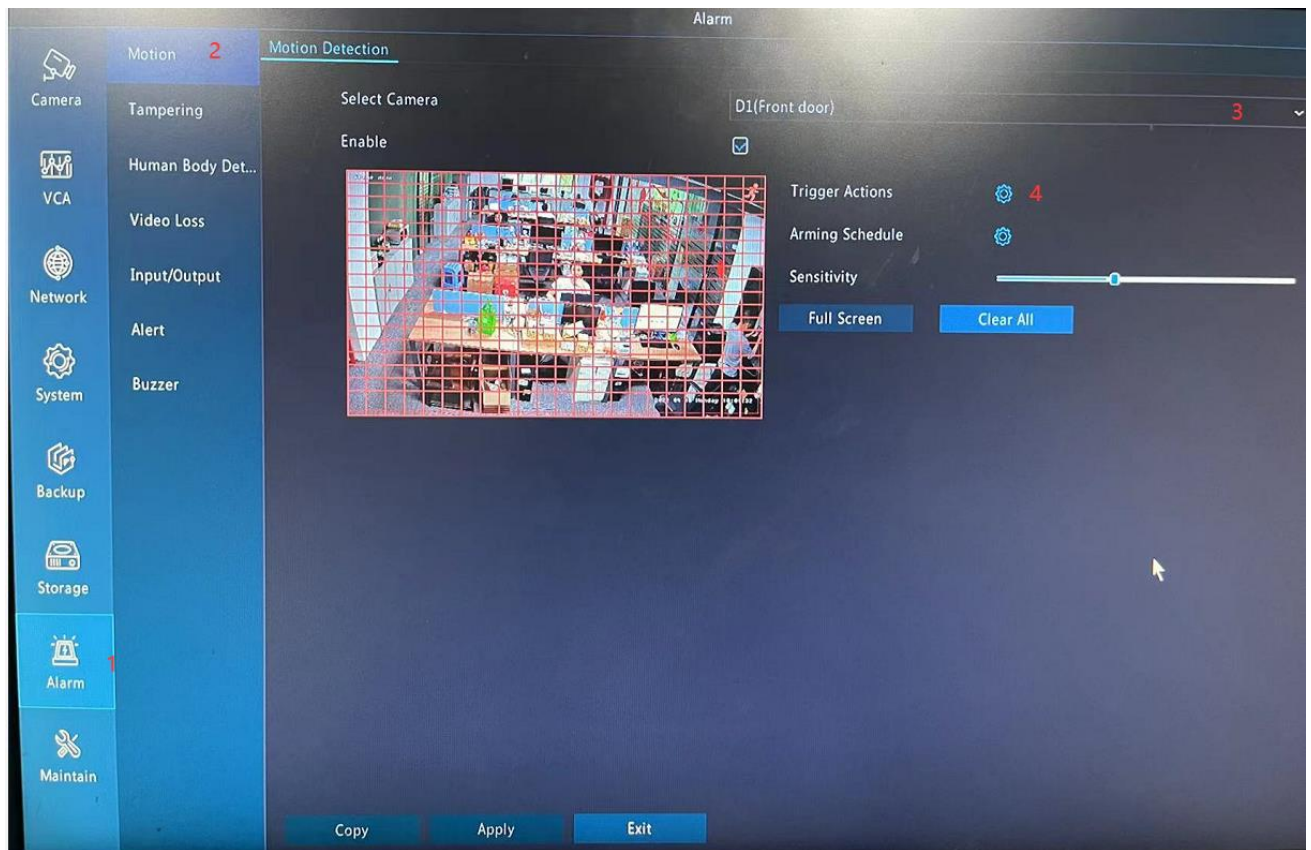

2- When enter the "trigger actions" as step 1. Please disable the checkbox like below.

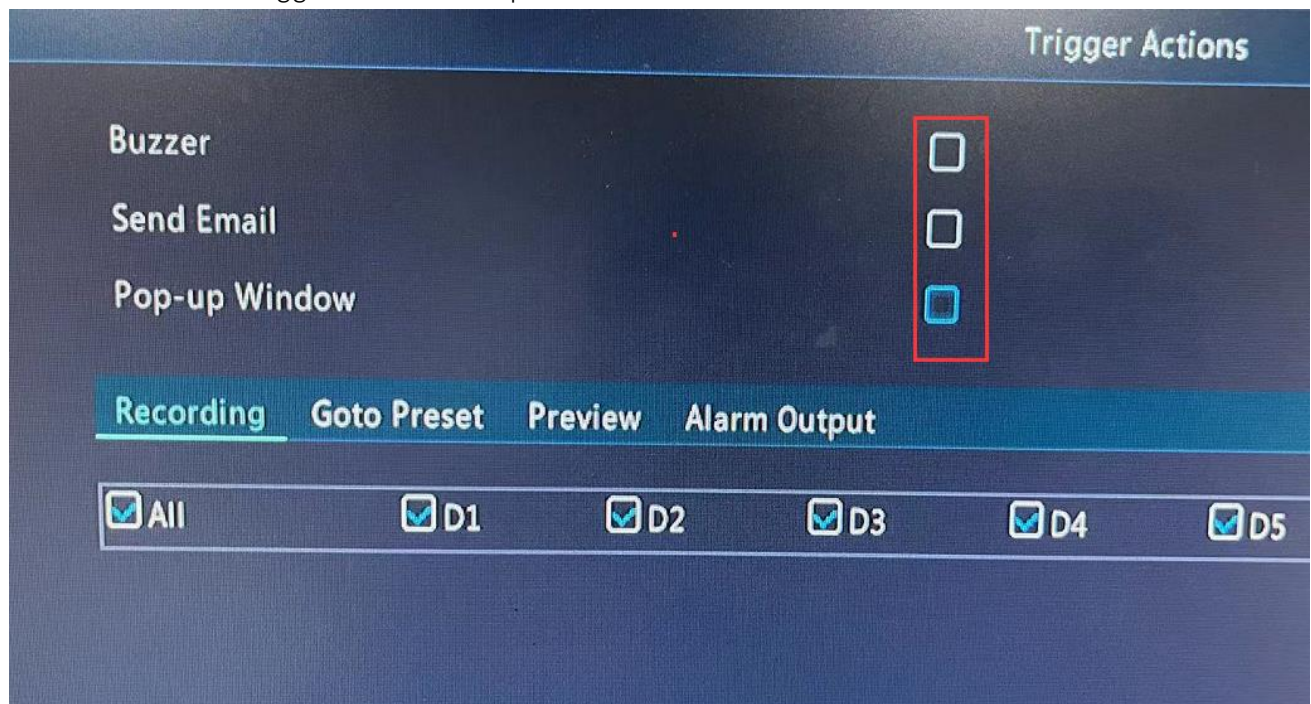

3- If there are more cameras, please remind to select camera channels one by one and do the same settings.

