

WARM TIPS:

This is user manual can be referred both for NVR Kits and Single NVR


Default User Name and Password:

1. 8ch and 16ch system, default user name: admin, default password: 123456
2. 32ch system: default user name: admin, default password: 1234@abcd (or 6789@asdf)


Forgot password or reset password

1-1: Click “Forgot Password” in the login page. (PIC 1);

1-2: It comes a page and request to input your email address (PIC 2)

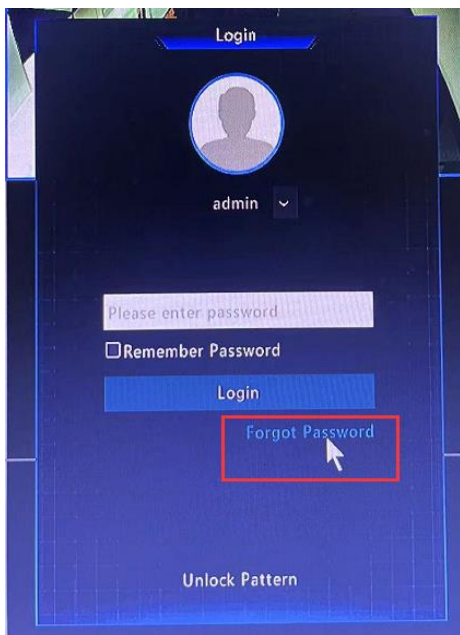



PIC 1

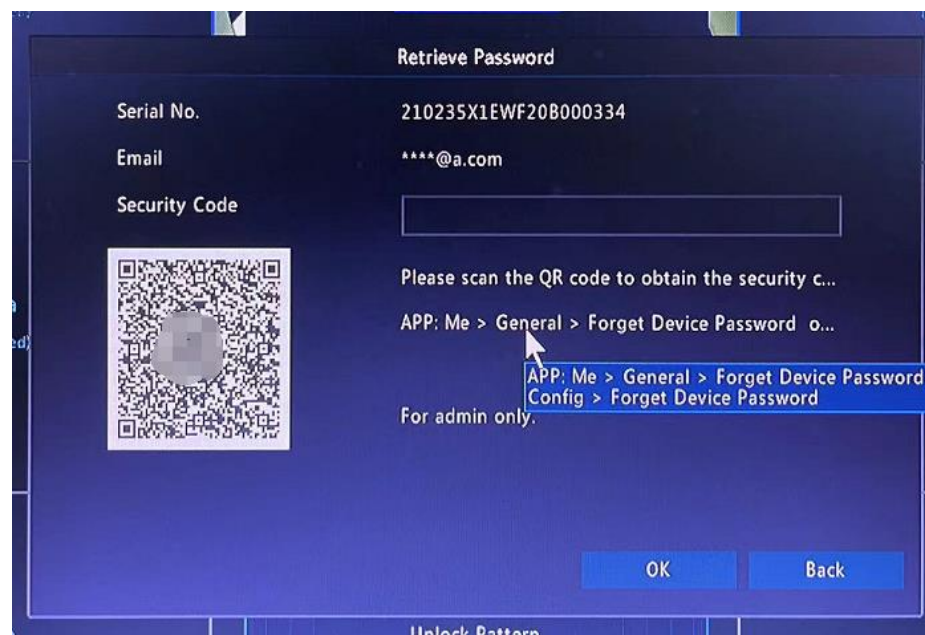


PIC 2

1-3: User our “Guard Viewer” App. Steps as following pictures.

Click “Me”>” General”>” Forget Device Password”, then scan the QR code, and security code will be sent to your email that input in step 1-2.

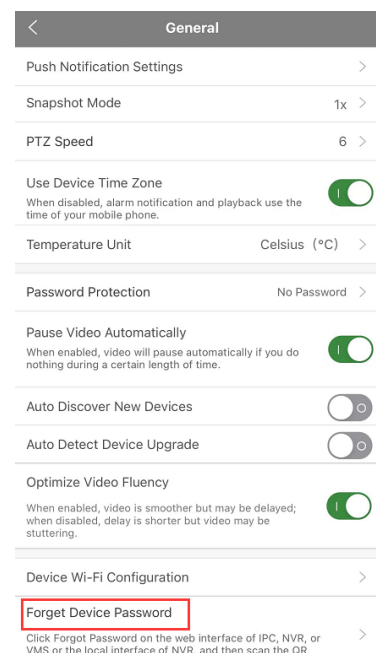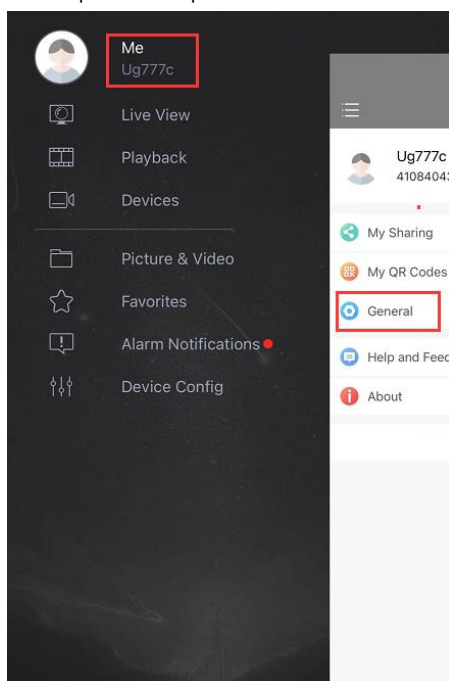

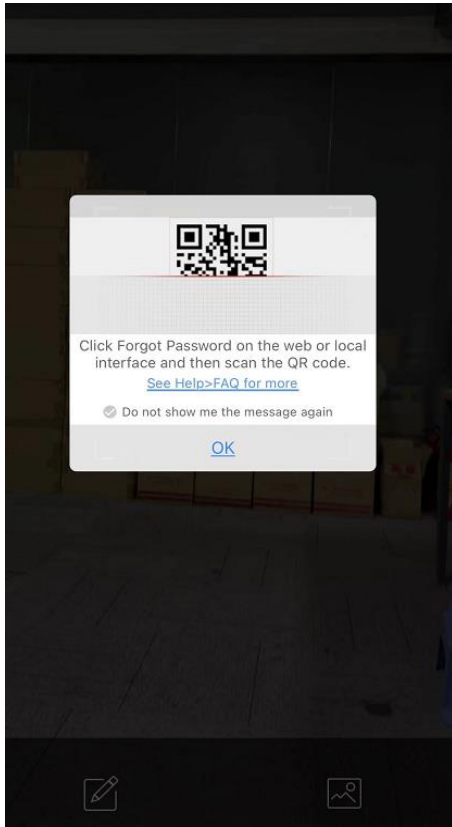

Retrieve Password

A password will be sent to your registered email address.

1****4@a.com

You can use it to access the device's Web or local interface and reset password.

OK