


## How to change single camera's feature

### In GWSECU Security System

Briefly speaking, since it's unable to change camera's settings while you are using our security camera systems with plug & play. So, we have to set cameras individually.

1. Please make sure that your system had connected to your router/switch that with internet access. And prepare a computer connected in same network, which means the recorder's IP address must be in same gateway with your computer. For example, the recorder IP 192.168.1.44 and computer IP 192.168.1.45.

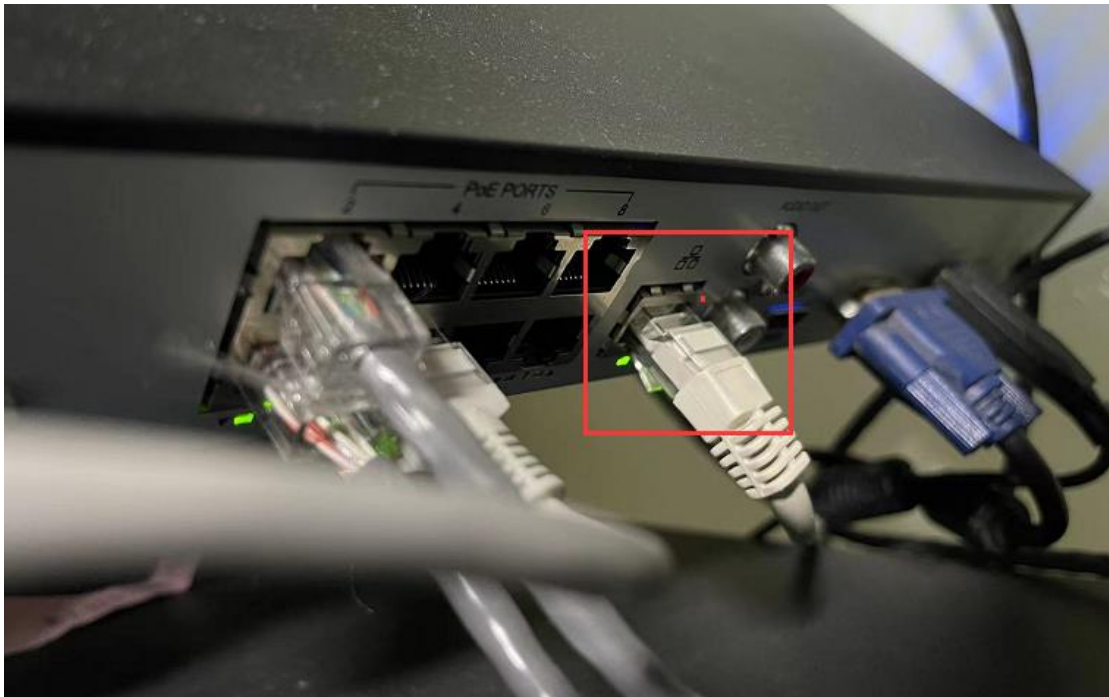

2. Please download tool from our website.

[https://www.gwsecu.com/Uploadfile/file/Software/NVR\\_3\\_Series/GuardTools-R1122.2.3.2\(IN\).exe](https://www.gwsecu.com/Uploadfile/file/Software/NVR_3_Series/GuardTools-R1122.2.3.2(IN).exe)

(Click to download), or visit our website as below:

<https://www.gwsecu.com/support/?sortID=4>

3. After downloaded and installed this tool, you will find NVR recorder connected. Like below.

Download Center 1

User Manual

**Software 2**

NVR/XVR Datasheet

IP Camera Datasheet

Catalog

NVR KIT Datasheet

Video

Software

Name	Description	Version	Size	Operating
NVR APP_iOS		2101I-1.13.0	28 MB	<a href="#">Download</a>
NVR APP_android		R2101.2.27.3	51 MB	<a href="#">Download</a>
NVR Player		1111-1.0.7	32 MB	<a href="#">Download</a>
Tools of NVR 3		R1122.2.3.2	45 MB	<a href="#">Download</a>
NVR CMS Software_Win64		B1130.3.11.0	54.58 MB	<a href="#">Download</a>
NVR CMS Software_MAC		B1113.3.10.0	82 MB	<a href="#">Download</a>
IP Camera Search Tools		V5.7.3	17.5 MB	<a href="#">Download</a>

Guard Tools 2.0

Total 1 device(s)

Refresh

Search Setup

English

Device Cfg.

☒ All
 ☒ IPC
 ☒ NVR
 ☒ Other
 


All Status

Please enter keywords


[Login](#)
[Modify Password](#)
[IP Modify IP](#)
[Device Config](#)
[Export](#)

Device Name	IP	Model	Version	MAC	Subnet Mask	Gateway
NVR3216-P16	192.168.10.21	NVR3216-P16	NVR-B3211.31.30.C1...	e4:f1:4c:59:3a:46		


4. When you find this IP address, please input it into web browser (Google chrome recommended) to login camera's WEB page, and login with **your own account and password (This is the NVR system password that you've set by yourself)**. Like below.

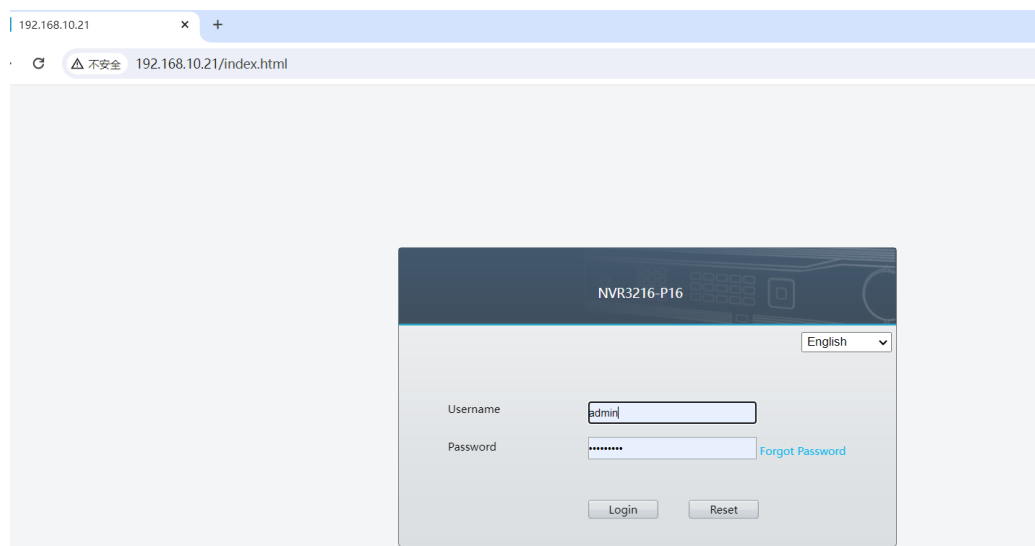

5- After login the system, please go setup>camera and selecting the camera channel that you want to change the settings. For example channel 1 and then click "Access"

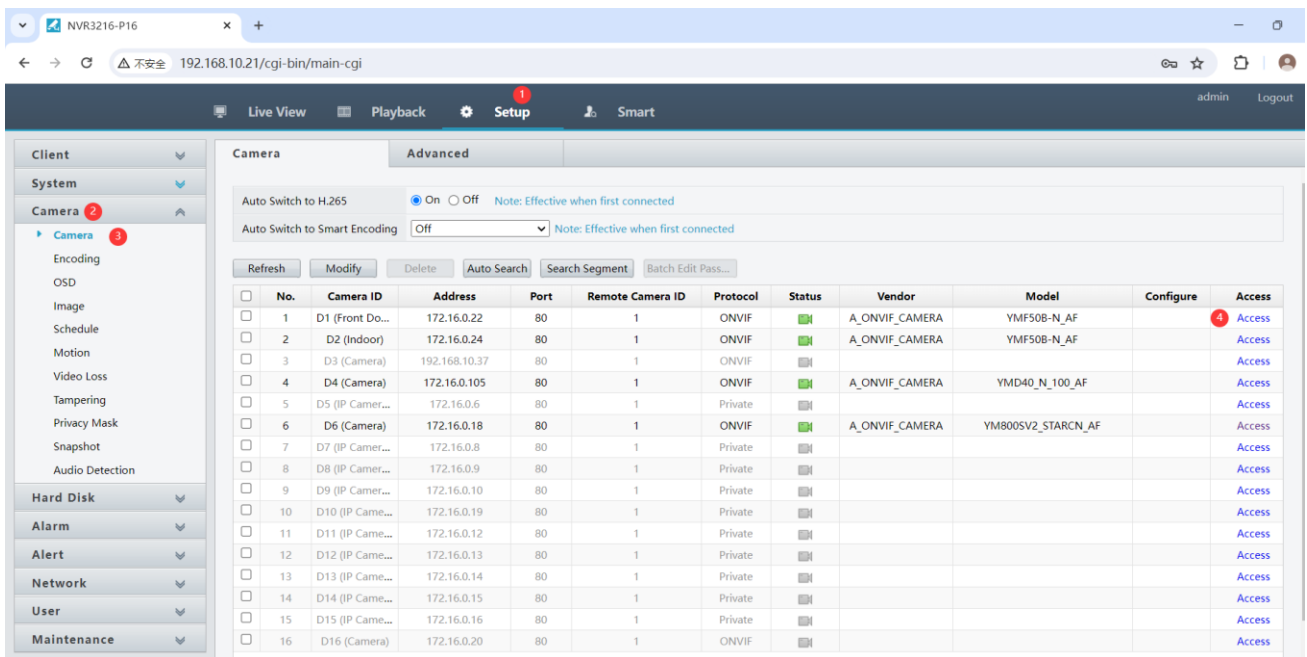


6- After click above "Access", it will automatically turn on camera's web page. **The camera default information as below: user: admin, password: 123456**

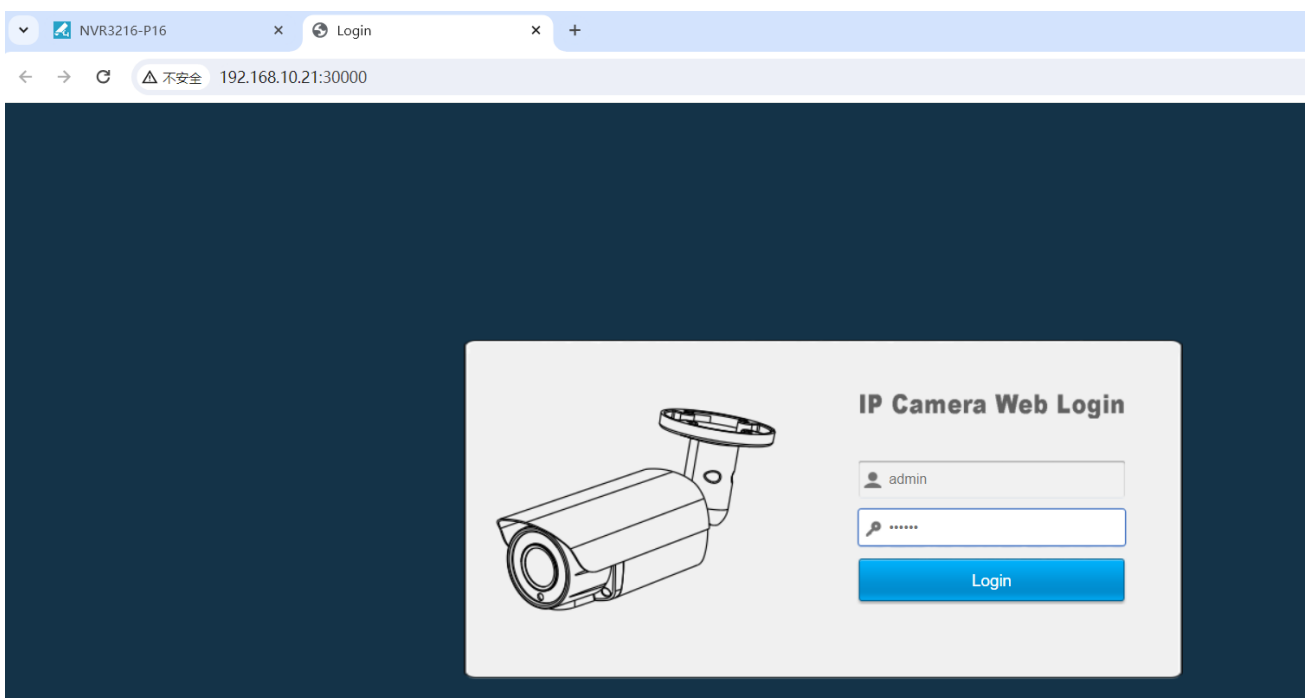

7- When you login the camera web browser, you can change the settings base on your needs. Like the picture below that mostly used few settings.

- ① **Forced anti-flicker:** For mostly used for camera installed indoor, and some of the light's frequency doesn't match with the cameras which caused camera image flashing.
- ② ③ **Horizon Flip and Vertical Flip:** mostly used for camera image rotating.

- ④ **Light mode:** Mostly used to select the night vision type. Especially for our smart dual-light cameras that with warm LED options. If you don't want the LED light turns on, just select "pure infrared light".

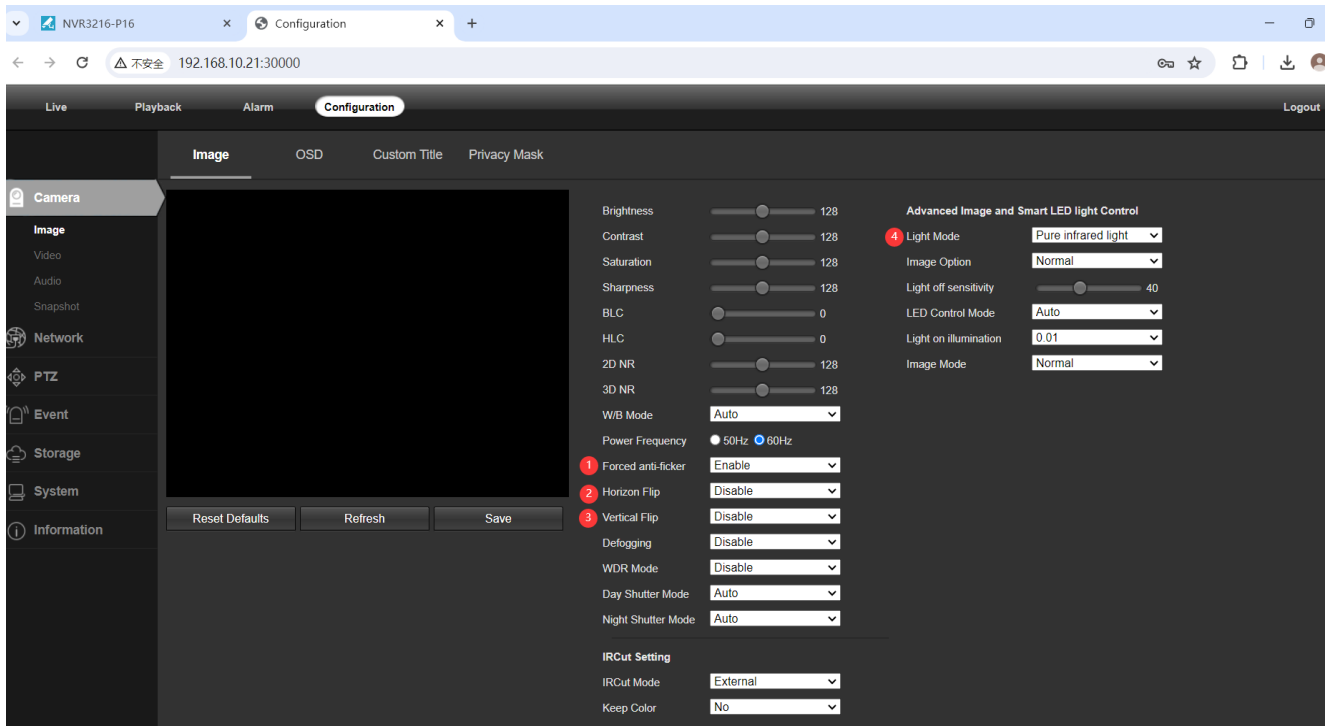

If any questions, please contact to us via email: [support@gwsecu-cctv.com](mailto:support@gwsecu-cctv.com) or WhatsApp as below.

