



How to add camera into 32 channel camera system


Firstly, make sure the correct connection between camera and PoE switch like below:

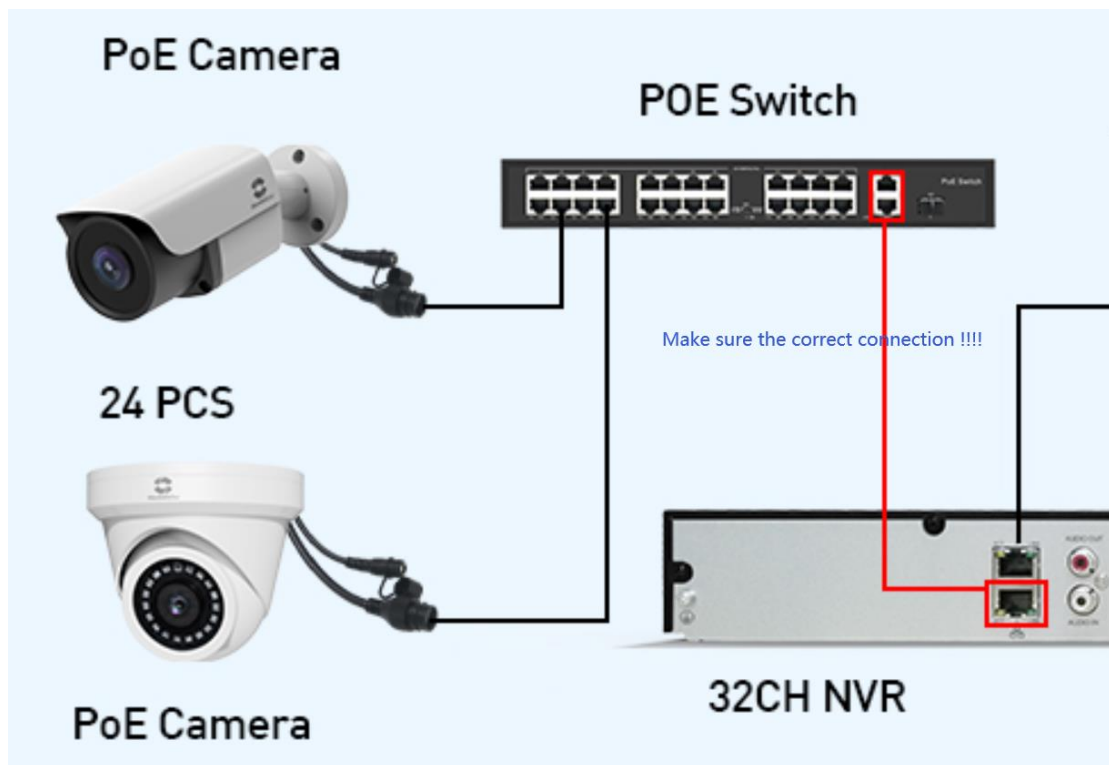


Secondly, when camera connected and we can click "Refresh" and wait for a while, the camera that been connected will be listed like below. And then we click "Add" button.

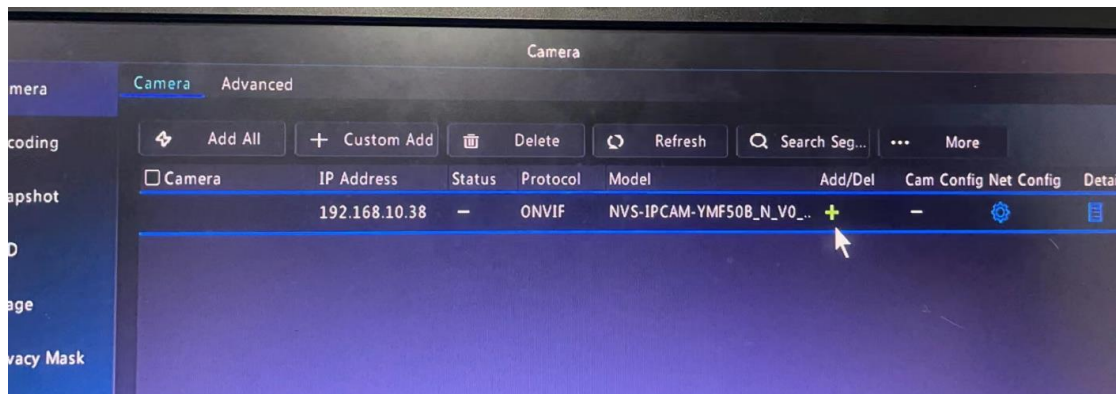

After adding camera into the system, the IP address will be changed into 192.168.2.xx and the status will change into blue icon, like picture below.

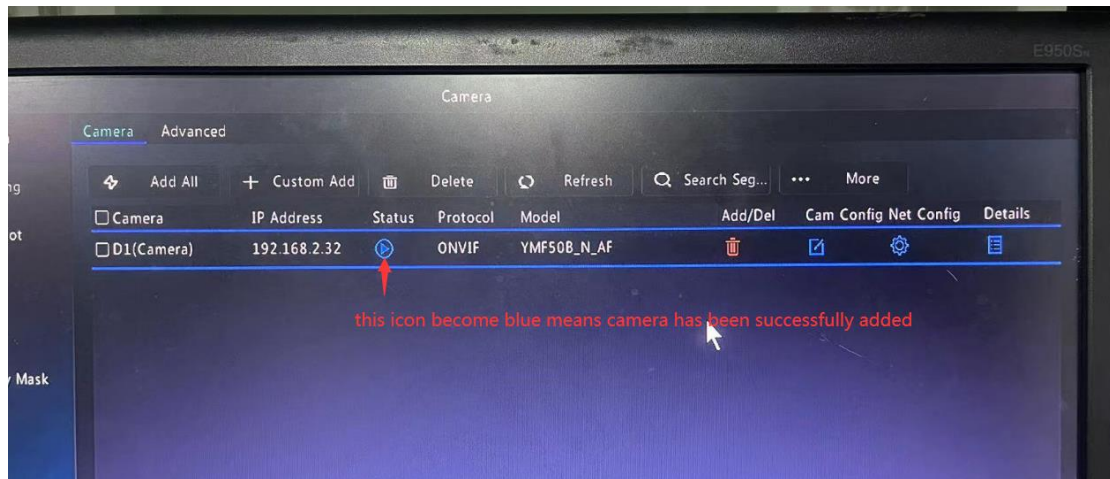

It will be automatically recognizing the camera (if it's our own brand), and don't need to input username and password.

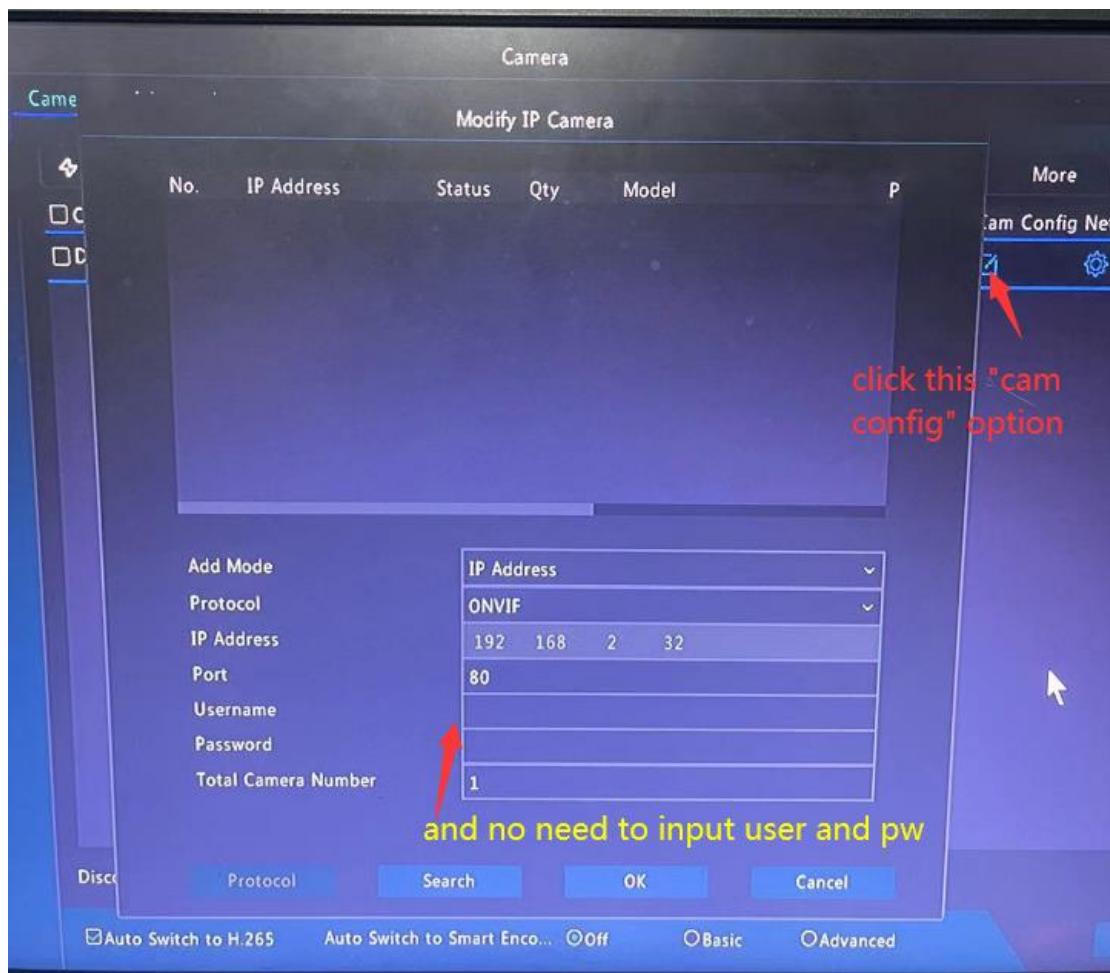

If the camera doesn't show up, or other indications, just delete and re-add it again. Like picture below

Camera

Camera Advanced

Add All Custom Add Delete Refresh Search Seg... More

<input type="checkbox"/> Camera	IP Address	Status	Protocol	Model	Add/Del	Cam Config	Net Config	Details
<input type="checkbox"/> D1(Camera)	192.168.2.32		ONVIF	YMF50B_N_AF				

if the camera doesn't showup, click this delete button and re-add it again.